



## SH Type Wiring Guide

Standard heater sets will come with different terminal sets depending on the customer's requirements. Refer to the below examples for wiring guideline of SH type Fin PTC Air Heaters with Type 4 accessories (PPS frame + terminal wire sets, fuse and thermostat).


### STANDARD WIRING 1 (Single Insulation)

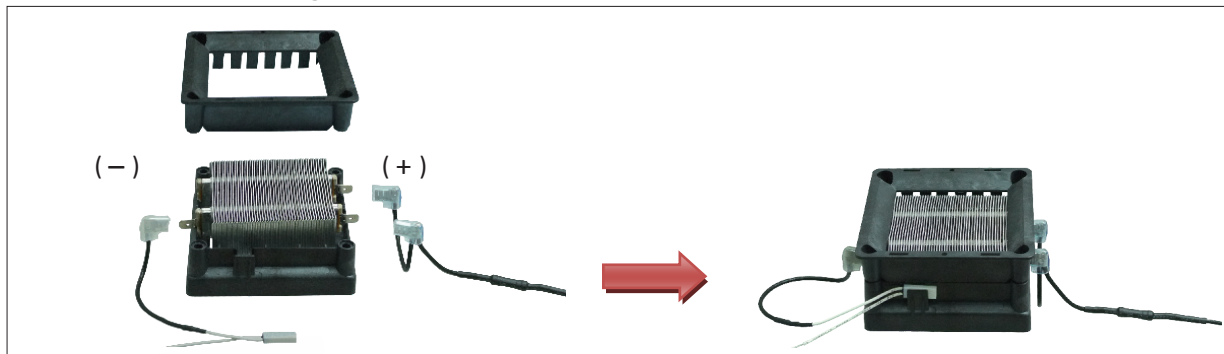


### STANDARD WIRING 2 (Double Insulation)

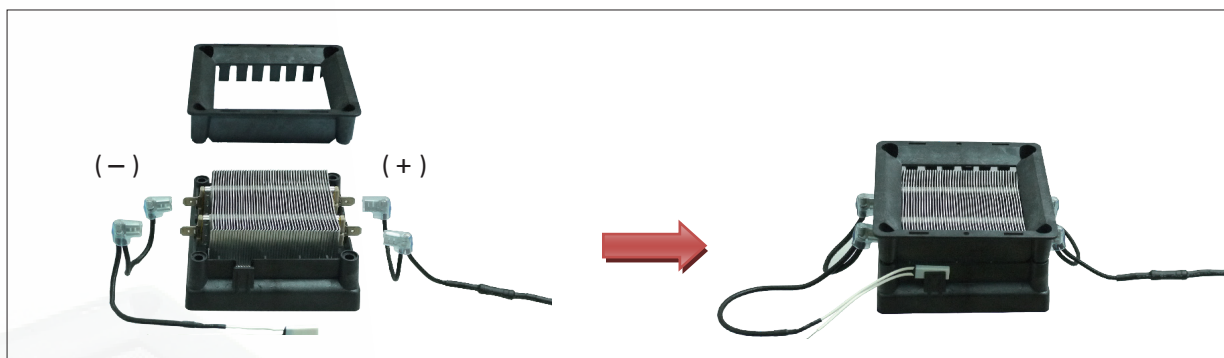

### STANDARD HIGH AMPERE WIRING (Does not include thermostat)

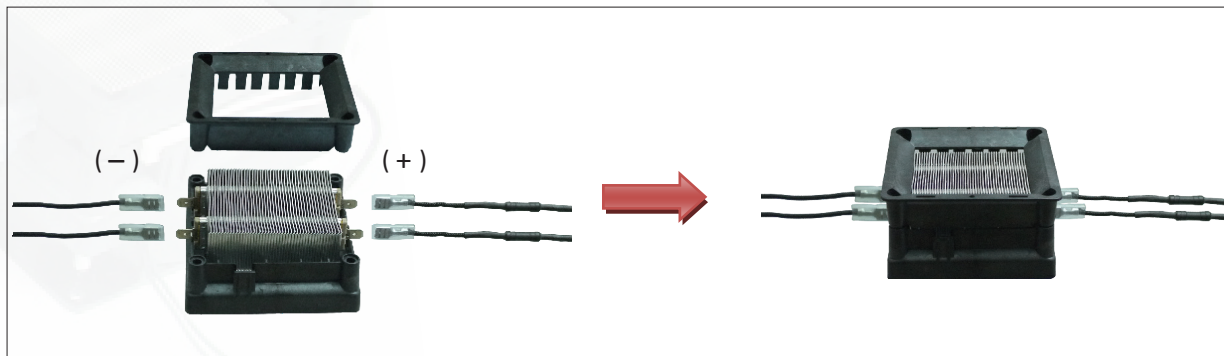

### TWO STAGE POWER SETTINGS (Requires special order)

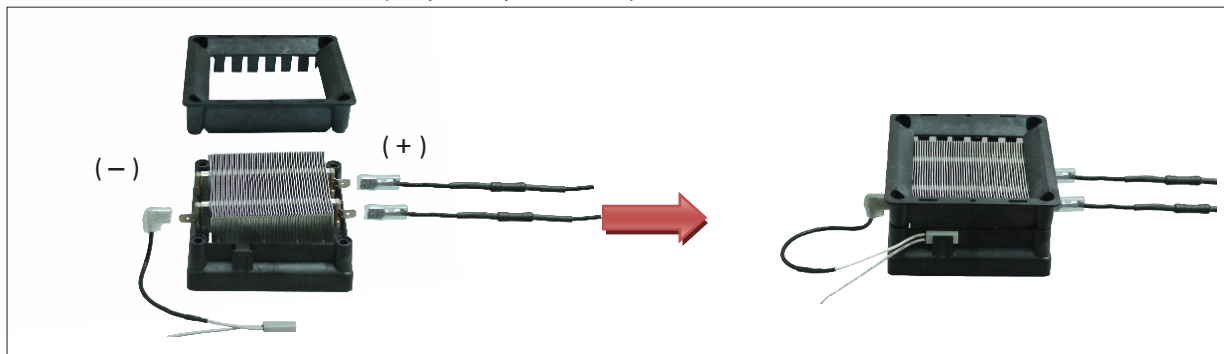

(+) side : refer to illustration above & connect each wire to separate switches.

(-) side : same as standard wiring (refer to Standard Wiring 1 for single insulation; 2 for double insulation; 3 for high ampere).